

SACTERM V1.0

Installation guide

The software can operate on Windows 98/NT/2000/XP/Vista platforms and requires software package .NET framework 2.0.

The software installation wizard will begin automatically after the CD is inserted.


When the installation is not started automatically, please search for program Setup.exe and start it manually by double clicking on the icon.

Please follow the instructions provided by the installation wizard.

After selecting installation language please select components to be installed. If you purchased SAC-USB interface, select also VCP SAC-USB Driver to be installed in the case if it is not already installed on your computer.

When installing on WIN98 operating system, the driver needs to be installed manually and VCP SAC-USB Drivers should be unchecked. Please refer to end of this installation guide.

When installing on WIN98 operating system or operating system language is not English, it is recommended that .NET Framework 2.0 should be installed manually.

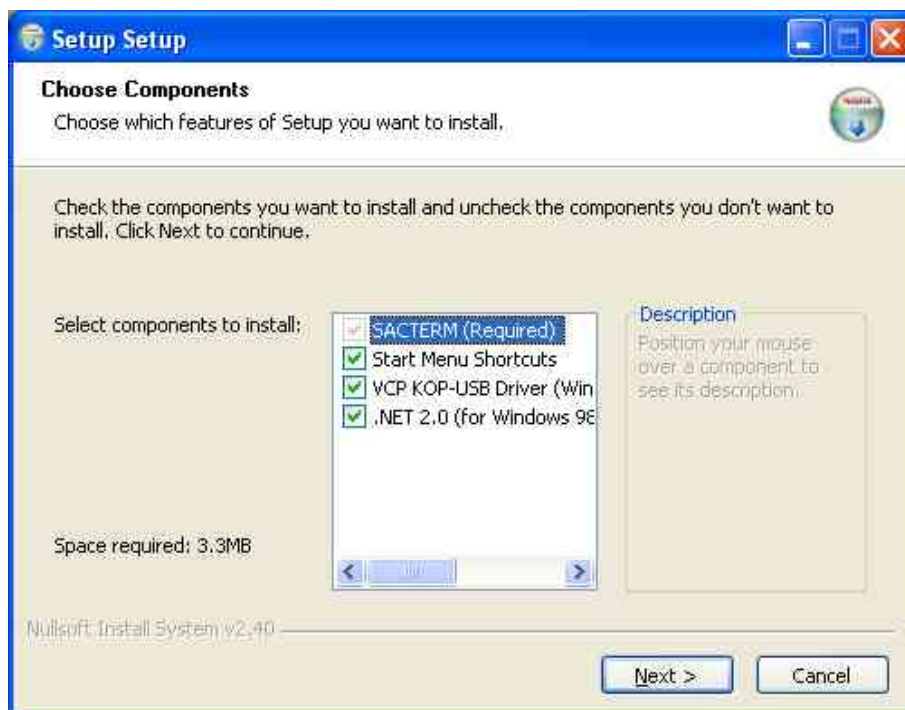

Click next and select installation directory. Please note that .NET Framework 2.0 installation can take considerable amount of time especially on older machines.

Lastly click Finish to end the installation process.

Manually installation of VCP SAC-USB Driver on WIN98 operating system

When installing on WIN98 operating system, plug the SAC-USB interface in the USB port. Select the driver location on \KOP_USB_DRIVER_WIN_98\ directory.

Manually instalation of .NET Framework 2.0

The package .NET Framework V2.0 is developed by Microsoft and requires following software:

- [Windows Installer 3.0](#) (except for Windows 98/ME, which require [Windows Installer 2.0](#) or later). [Windows Installer 3.1](#) or later is recommended.
 - o [IE 5.01 or later](#): You must also be running Microsoft Internet Explorer 5.01 or later for all installations of the .NET Framework.

The package can be installed separately and downloaded from <http://www.microsoft.com/downloads/details.aspx?familyid=0856eacb-4362-4b0d-8edd-aab15c5e04f5&displaylang=en#Instructions>. This is recommended for operating systems that has not English language setting. In that case please install .NET Framework 2.0 before installing SACTERM software.

Start the **dotnetfx.exe** when you are using English language version of operating system. If one of the required software is not already installed on your computer, it is necessary to install all the missing components. The software is available on Microsoft home page for licensed users. Please refer to the Instructions link for downloading required parts.

Note: If the message is shown at starting SACTERM that .DLL is missing the software package .NET Framework 2.0 is not properly installed.

For further details and troubleshooting regarding installation and setup, please contact PIKTRONIK d.o.o..

Contact information:

Urlep Evgen, Ph.D.E.E

info@piktronik.com, evgen@piktronik.com

Phone: +386 2 460 22 45

Piktronik d.o.o. Home page : www.piktronik.com

Cesta k Tamu 17 Email: office@piktronik.com

2000 Maribor Phone: +386 2 460 22 50

Slovenia Fax: +386 2 460 22 55